 
 
 


PL145GG,PL 146GG,PL 192GG, PL196GG, PL198GG RETURN


Thank you for purchasing the Performance Return. Please follow these instructions for easy assembly.








KLIX CAM INSTRUCTIONS

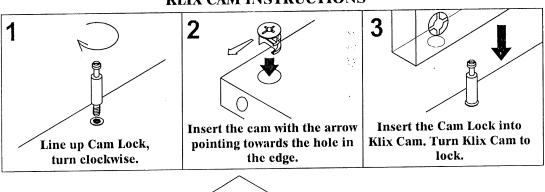


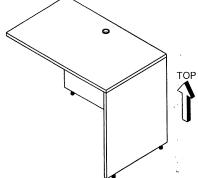


IMPORTANT!


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.
- When using these models in a borders setup, first you need to layout all posts and panels before attaching to work surfaces. DO NOT use template.




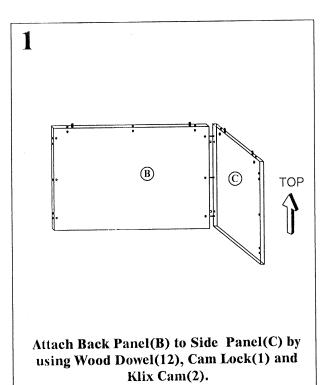


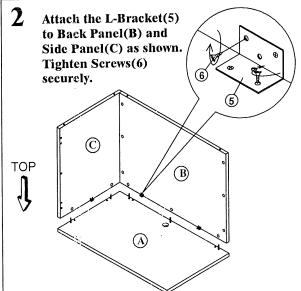

Attach the Back Panel(B) and Side Panel(C) to Top Panel(A) by using Cam Lock(1) and Klix Cam(2).

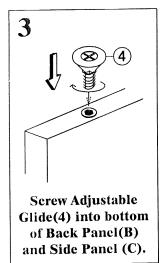

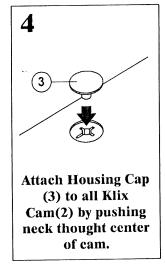

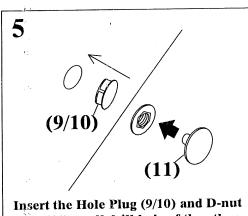

Insert the Hole Plug (9/10) and D-nut Cap (11) to all drill hole of the other edge of Side Panel (C) and Back Panel (B) which the hole are not in use.

Additional Hardware.

Please note that Performance Office Furnishings has enclosed additional hardware to allow you to attach this return to other pieces.